



USER GUIDE

Hygro-Thermometer - Model RHM15

Operation

1. To power the unit, open the rear battery compartment by pushing downward on the battery compartment cover as indicated by the arrow. Remove the battery strip, this will allow the battery to make contact and power the meter.
2. Remove the protective display decal foil.
3. The left display shows the temperature reading and the right display shows the relative humidity %.
4. Displaying maximum (MAX) and minimum (MIN) readings:
 - a. Press the MAX/MIN button, the highest values measured since the last reset will be displayed.
 - b. Press MAX/MIN again to view the minimum readings.
 - c. Press MAX/MIN again to return to the normal mode.
 - d. Press the CLEAR button to reset the MAX/MIN memory.

Battery Replacement

1. Open the rear battery compartment by pushing downward on the battery compartment cover as indicated by the arrow.
2. Replace the LR44 or AG13 battery and close compartment.



All EU users are legally bound by the Battery Ordinance to return all used batteries to community collection points or wherever batteries / accumulators are sold!

Battery disposal in household trash or refuse is prohibited! Never dispose of batteries in a fire. Follow the valid legal stipulations in respect of the disposal of the device at the end of its lifecycle

Specifications

| | |
|-------------------|---|
| Temperature | Range: 14 to 140°F |
| Relative Humidity | Range: 10 to 99% RH |
| Resolution | RH: 1% / Temperature: 1°F |
| Accuracy | ± 2°F from 14 to 122°F ±5% Relative Humidity from 30 to 75% RH |
| Battery | LR44, AG13, or equivalent |
| Dimensions | 2 x 1.5 x 0.63" (50.8 x 38.1 x 16mm) |
| Weight | 0.8 oz. (23g) |

Copyright © 2022 FLIR Systems Inc.

All rights reserved including the right of reproduction in whole or in part in any form

ISO-9001 Certified

www.extech.com